

Handguard Gauntlet X2

Part # 34458

Installation Instructions



Step 1	Determine the left and right gauntlet. The PowerMadd logo should be face up and located on the outside edge of the gauntlet when installed. See photos on box. Open the gauntlet and turn it inside out. This will make installing easier. See photo 1	
Step 2	Fasten the Velcro strap located on the opposite side of the logo. Slide the closed loop over the inside (reservoir cover) of your handguard. See photo 1	 <p style="text-align: right;">Photo 1</p>
Step 3	Continue sliding the gauntlet onto the handguard until the gauntlet completely covers the handguard. The outside edge of the handguard should touch the outside edge of the gauntlet. See photo 2 and 3	 <p style="text-align: right;">Photo 2</p>
Step 4	Secure the two outside Velcro straps of the gauntlet in a criss-cross fashion as shown in photo 3	 <p style="text-align: right;">Photo 3</p>
Step 5	At this point turn the gauntlet right side out. See photo 4	 <p style="text-align: right;">Photo 4</p>

Handguard Gauntlet X2

Part # 34458



Installation Instructions

Step 6	Overlap and secure the side Velcro flaps. You have a large area of velcro on the side flaps which can be used to adjust the position of the gauntlet by securing in various positions. See photo 5	 <p>Photo 5</p>
Step 7	Secure the handlebar cover by looping the 1" strap through the buckle and tighten around handlebar. The handlebar cover will help to seal any air and or water from entering the inside of your gauntlet. Make sure the all holes are sealed when tightening the strap. Extra strap can be tucked into the gauntlet.	 <p>Photo 6</p>
Step 8	Repeat for other side. CAUTION: MAKE SURE THROTTLE AND BRAKE FUNCTION AS INTENDED.	 <p>Photo 7</p>
Note!	On the interior outside edge of each gauntlet are sewn in loops. These can be used to secure the gauntlet to a PowerMadd handwrap or any closed loop handguard system. Visit our YouTube channel for install instructions: www.youtube.com/powermadd2011	 <p>Photo 8</p>

LIMITED WARRANTY POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effective for one year from the original purchase date.