

Sentinel Armor

Installation Instructions for Part No. 34477



Hardware Included:

- 4 – Short plastic bolts
- 4 – Long plastic bolts
- 8 – Plastic nuts

Tools Required:

- Screwdriver
- 11mm or 7/16" wrench

PLEASE READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

For Sentinel Handguards only!

Note: If you have mirrors with your Sentinel handguards, leave the mirror mounted to the handguard and mount the Armor as instructed. The Armor will slightly restrict your view. If you prefer you can trim a portion of the Armor away for full use of your mirrors.

STEP 1: Remove your handguards if they are already mounted and remove the vent covers.

STEP 2: Holes need to be drilled in the handguards to mount the Sentinel Armor. Use the Armor as a template to mark the location of the holes. Place the Armor inside the handguard, the handguard mounting tabs go through the cutout in the Armor (see photo 1).

STEP 3: Insert two of the supplied short bolts into the vent cover holes going through both the guard and Armor. Use two of the supplied nuts to secure. (see photo 2) **Be careful to not over tighten the nuts or they could strip out the bolts.**

STEP 4: Flip the guard and Armor over. There are two holes that need to be drilled. Push the Armor into the guard and mark each hole. Drill a 1/8" pilot hole and then a 1/4" hole (see photo 3).

STEP 5: Insert the longer bolts from the front of the guard through the Armor and attach the nuts. **Be careful to not over tighten the nuts or they could strip out the bolts.**

STEP 6: Replace the snap-in vent cover.

STEP 7: Repeat steps 1-6 for the other side.

NOTE: If installing the 34477 Armor with our LED light kit 34490 please call or email PowerMadd for the upgrade screw kit which includes 4 – 1/4"-20 x3/4" slotted screws. These will be used in the vent cover section for clearance with the LED light kit. 651-462-8465 or email techsupport@powermadd.com

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.



Photo1



Photo 2

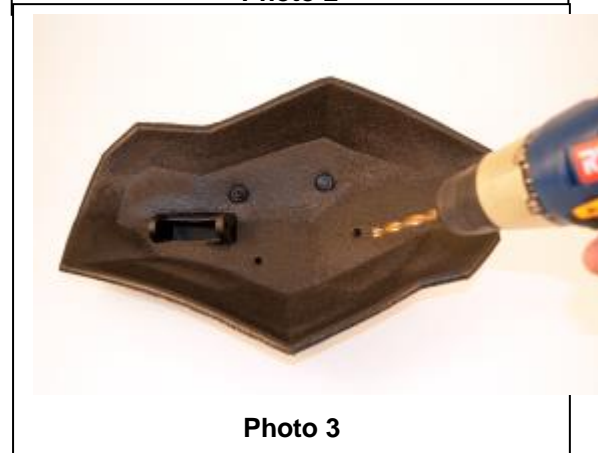


Photo 3