

POWERMADD®

Ski Doo XP

E.S.R. Seat Riser Kit

HARDWARE INCLUDED:

<u>Item</u>	<u>Qty</u>	<u>Description</u>
1	1	Seat Cover
2	1	Foam Seat Riser

TOOLS REQUIRED:


Flat Blade Screwdriver
Needle Nose Pliers
Air Stapler
1/4" T50 Staples

Step 1: To remove the seat, lift on the lever under the front of the seat and slide the seat back. See photo 1.



Note: Our seat riser kit can be installed over the OEM seat cover or if you prefer you can remove your OEM seat cover. To install over the OEM seat cover proceed to Step 3.

Step 2: Place seat upside down on a flat surface. Using a flat blade screwdriver and needle nose pliers remove all staples holding the OEM seat cover onto the seat base. Remove OEM seat cover and set aside.

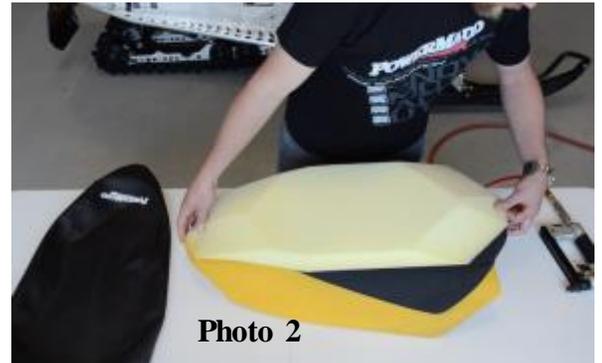

Step 3: Place the Seat Riser foam on the seat and center as shown in photo 2.

Step 4: Lay the PowerMadd Seat Cover over the seat and seat riser foam. Start with the rear and pull it snug. Then pull the seat cover over the front two corners. See photo 3 & 4.



Step 5: Verify that the seams of the seat cover align with the seat foam and OEM seat. See photo 5.

Step 6: Flip the seat over and lift the release lever and tuck the cover underneath. See photo 6.

Step 9: Locate the two highest points of the seat. Secure the seat cover to the base using 1/4" T50 staples. Before each staple is place, pull the seat cover tight. See photo 7.

Step 7: Once you have placed 5-10 staples on the highest point, do the same on the opposite side and verify that the seat cover is still aligned correctly.

Step 8: Continue stapling up one side of the seat toward the rear of the seat by pulling the seat cover tight then stapling the cover to the seat base. Smooth out any wrinkles before stapling and make sure seat cover is positioned correctly. Like the OEM seat cover, staples should be placed 1” apart.

Step 9: Repeat Step 8 for the other side of the seat.

Step 10: Staple front of seat cover to seat base. Smooth out any wrinkles before stapling.

Step 11: Staple back of seat cover to seat base. Smooth out as many wrinkles as possible before stapling. Extra fabric may need to be folded over and stapled.

Step 12: Reinstall seat by sliding it into place.



Photo 4

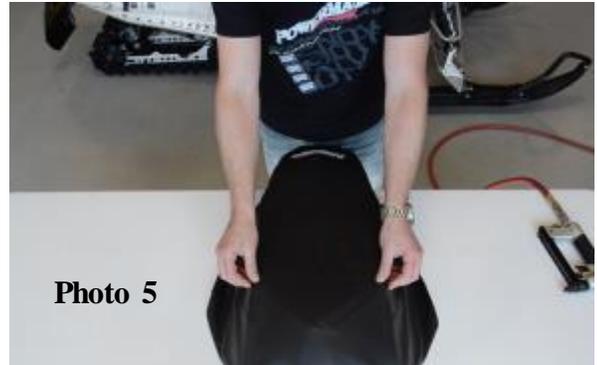


Photo 5



Photo 6



Photo 7

For video installation instructions go to [youtube.com](https://www.youtube.com) and search “PowerMadd Ski Doo XP Seat Riser” or refer to:

<http://tinyurl.com/xpseatrisher>

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effective for one year from the original purchase date.