

PowerMadd Sentinel Handguard mounting on Suzuki DRZ400

34452 ATV/MX Mount

NOTE: Use these instructions along with the instructions provided with the mount kit.

Clutch side:

Loosen the clutch perch assembly and move to the right (towards center of motorcycle) just enough to make room for the mounting bracket. Mount bracket underneath the lever, between controls and clutch perch as shown in photo. Adjust height and width of the handguard to your preference using the instructions included in the 34452 mounting kit. Tighten all fasteners.



Throttle side:

Loosen front brake perch and controls and slide assemblies to the left (towards center of motorcycle) just enough to make room for the mounting bracket. Mount bracket underneath the brake lever, between controls and throttle assembly as shown in the photo. Adjust height and width of the handguard to your preference using the instructions included in the 34452 mounting kit. Tighten all fasteners.



Sentinel Street LED light kit Instructions DRZ400 34491


NOTE: Use these instructions along with the instructions provided with the Sentinel Street LED light kit.

NOTE: Since the OEM turn signals are not LED you will need to replace the flasher with an LED flasher so the turn signals will flash at the proper rate. These are available from many online retailers.

Remove the headlight cover and headlight to expose wires.

Connect all four of the supplied spade terminals to the four wires on the LED module.

- 1.) Find the orange wire shown in photo. This wire is the keyed power wire. Connect a supplied T-tap to this wire. The red wire labeled “+” will connect here.
- 2.) Find the light green wire as shown in the photo. This is the right turn signal wire. Connect a supplied T-tap to this wire. The white wire labeled “right” will connect here.
- 3.) Find the brown wire as shown in the photo. This is the left turn signal wire. Connect a supplied T-tap to this wire. The yellow wire labeled “left” will connect here.
- 4.) Find the black/white wire as shown in the photo. This is the ground wire. Connect a supplied T-tap to this wire. The black wire labeled “ground” will connect here.

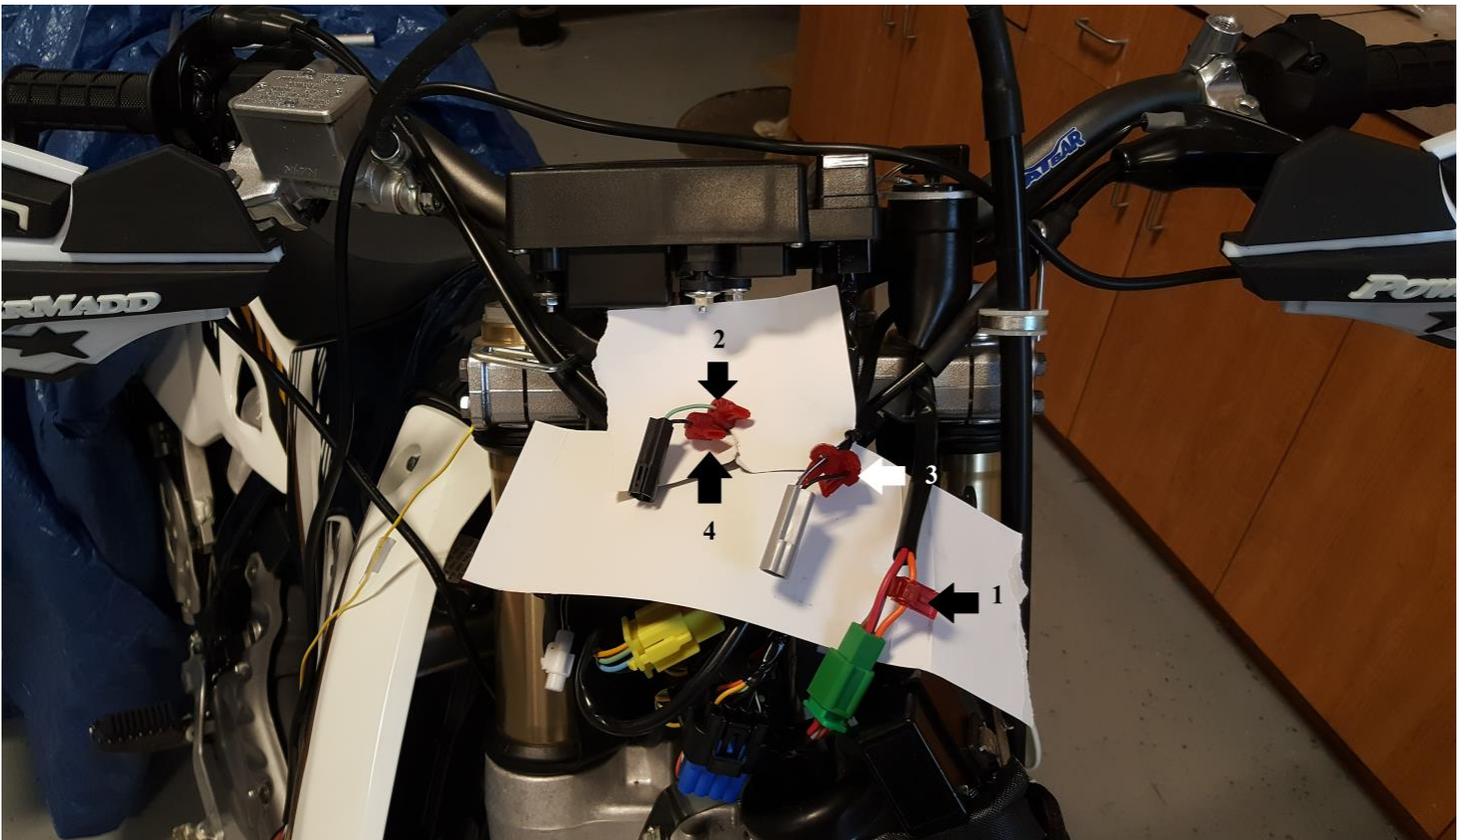

Using the instructions provided with the 34491 kit, complete the installation of the Sentinel Street LED light kit.